

FRANKE

Flair

The art of excellent coffeemaking



For your Safety...


Please observe the
safety instructions!

Operating instructions

We congratulate you to the purchase of a Franke coffee machine. You have decided for a high quality coffee making machine, developed and manufactured following state of the art technologies. The Franke Kaffeemaschinen AG manufactures its machines according to the ISO 9001 and ISO 14001 standards. Its certification is under permanent control by external agencies.

Das System

- Coffee bean container/grinding unit
- Access for cleaning tablet
- Operating unit
 - Display
 - Choice of product or function buttons
 see customer menu [Page 8-10]
- Water tank
- Coffee/milk outlet
- Hot water outlet
- Steam nozzle
- Grounds container flap
- Drip grid
- Drip tray

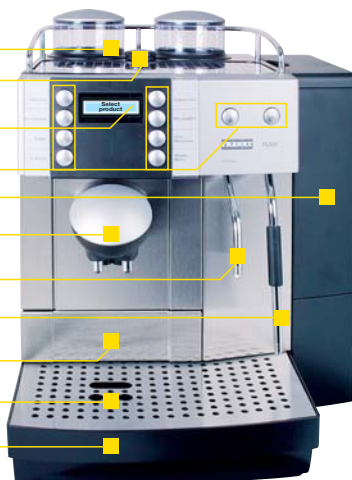

MILK	COFFEE	WATER	STEAM
<ul style="list-style-type: none"> • hot milk • froth 	<ul style="list-style-type: none"> • white coffee • cappuccino • macchiato 	<ul style="list-style-type: none"> • ristretto • espresso • coffee 	<ul style="list-style-type: none"> • hot water • steam

The products

first starting up

Fill water tank!
Beans/milk filled up!
measure water hardness using test strips (pages 9, 5, 2)!

Power supply cord... plug in	Main switch on rear panel	Switch on	Choose language 5.1 Language + - adjust	Date / time 2.1 Date time PROG. confirm	Rinse unit
--	-------------------------------------	------------------	--	--	-------------------

Starting up

Installation/starting -> is carried out by specialists from your supplier. The products and the basic adjustments are programmed following your requirements. You can make changes yourself through the «customer menu» function. [See 8 - 10]. Machine is plugged in but switched OFF: working condition «Energy-Save-Mode»	Stand by	Switch on/warming up/rinsing Fill water tank! Beans/milk filled up! or automatic timer [Seite 9] Operating temperature achieved	Use Unit ready to use! Select product Operating temperature achieved
---	-----------------	---	--

Safety

Failure to observe the instructions in this manual, including the safety instructions, can lead to hazardous situations due to the presence of steam, hot water, electricity etc.

Carefully read this instruction, especially the safety instructions before initial operation. For damages which occur out of non compliance with this instruction, no liability exists. Keep this instruction manual handy where also other users can readily refer to it!
If the coffee machine is taken out of use or is no longer used, it shall be disconnected from the power and water. In any other case local regulations are binding.



Prepare beverages

Coffee and milk products...

... or hot water/steam

- Refill coffee beans (container 1, 2)
- Only use fresh and cool milk!
- Clean air nozzles if no frothed milk is made (see page 5, Hint)



1



Place cups under outlet



Symbols: Press BUTTON

2



Choose product

- ! Menu 1 and 2 are examples. For adjustments to your needs see page 8/9
- ! The product inscription can differ depending upon equipment execution.



HINTS

✓ + without milk products / with

Draw products at the same time.

! Do not use instant or sugared coffee.

! Empty the grounds container each time it is removed.




place in the milk!

- ! Quantities preprogrammed
- ! For adjustments to your needs see page 8/9

Hot water

Steam

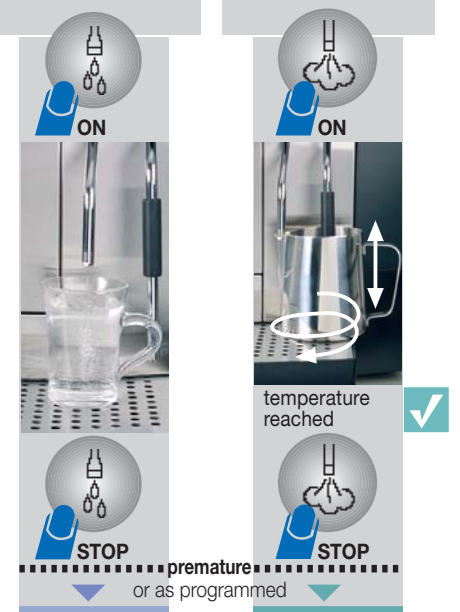

temperature reached ✓

premature or as programmed

3



Switch off / rinse


- If a product has been drawn and autorinsing has not yet taken place, the machine will automatically be rinsed before switching off.



NEVER put your hand in the bean container during operation!
DO NOT pour liquids on the cup-tray or the bean containers



Immerse the steam nozzles deeply into the container!
Otherwise hot water or steam can splash out or spray back

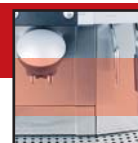

ALWAYS keep your hands away from the nozzles during product delivery, rinsing, cleaning and descaling!
There will be a strong burst of steam before the milk emerges!



Nozzles become hot! ONLY touch at hand-guard!
Do not swivel wand upwards when producing steam

Maintain / clean / descale unit

Rinsing, descaling and daily cleaning

! The unit must be cleaned after 220 DELIVERIES or 180 RINSES, or ONCE DAILY
 - The cleaning procedure of the coffee system needs approx. 5 min./with milk system approx. 7 min.
 - Use **ONLY** the cleaning and descaling products recommended by Franke (see page 7)!
 - Descaling takes about 35 minutes



Rinsing procedure

AUTOMATIC if programmed by service technician or MANUAL Start rinsing **! Rinsing does not replace daily cleaning! It is necessary to avoid residues in the coffee/milk environment!**

Daily cleaning

- Start cleaning **3 sec.!**
- Select cleaning
- Confirm cleaning


Descaling

- Start descaling **3 sec.!**
- the same as for «Cleaning» -> Steps 1 - 4
- Pour the descaler into the empty water tank [entire bottle, undiluted]
- continue cycle
- Remove and rinse water tank, then fill with water and reinstall



HINT

If necessary cleaning of the milk frothing head

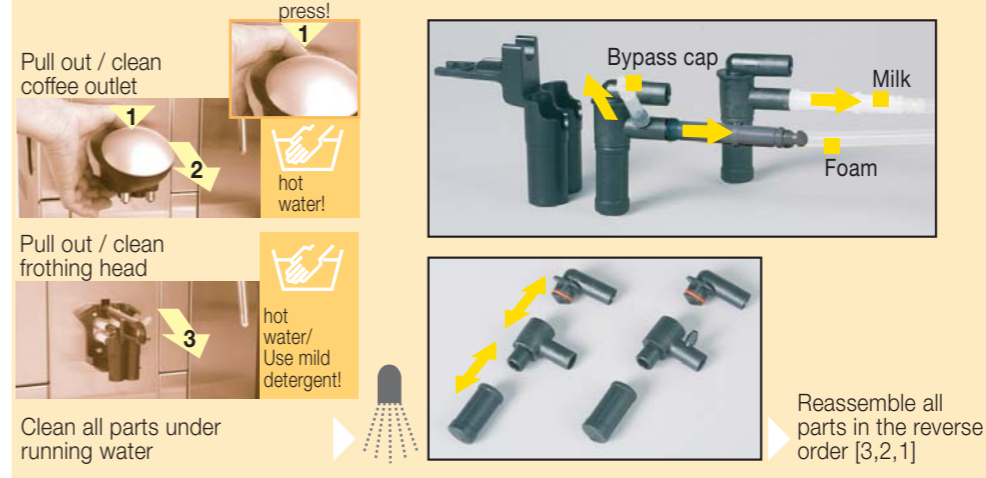

Entire cleaning

- Remove drip tray / empty / dry
- Slide the coffee outlet upwards
- Remove / empty -> insert container
- Insert drip tray

Coffee cleaning

- Start with step 5
- Start with step 5
- Start with step 5
- Start with step 5

Start with step 5

Continue with step 8

Continue with step 8

Continue with step 10

Continue with step 12

- Put milk in a cold place!
- 0.5 l water with 30 ml detergent
- Confirm cleaning
- Display: «Insert tablet» -> cleaning tablet
- Confirm cleaning
- Display: «Water for cappuccino» -> fill with fresh water (~ 1 liter)
- Confirm cleaning

Abort Switch ON / OFF **2x** Indication on the display

- done when display... **Select product**
- Insert drip tray and drip grid
- Insert container / close drop-door
- Cleaning coffee ground container casing
- Clean / dry container
- Remove / empty container
- Remove / clean / dry drip tray

SOS In case of an emergency: immediately unplug the mains cable!

Before cleaning the unit, switch it off, unplug the mains cable and allow it to cool down. **DO NOT** spray with water or immerse in water!

Clean machine with soft damp cloth. **DO NOT** use scouring agents!

Always carefully follow the instructions on the descaler package!

If the machine is defective or the mains cable is damaged, do not use it, and immediately unplug the mains cable. Do not attempt to repair the machine or mains cable yourself. To avoid risk of personal injury, have all repairs made by Customer Service!

- Use of FRANKE Original accessories, auxiliary material and spare parts is the best way to assure a long and secure life time of your Franke machine.



Auxiliary material

specifically tested and recommended by Franke

Detergent

Art.-Nr. BK 301 732



Cleaning tablets

Art.-Nr. 1P 315 195



-> Cleaning/descaling [page 4-6]

Descaler

Art.-Nr. 1P 315 430



Air nozzle

Art.-Nr. 1P 315 113



Grinder key

Art.-Nr. 1P 315 199



Specifications

	Model 230V / 50Hz	Model UL 230V / 60Hz	Model UL 120V / 60Hz	Model Japan 100V / 50Hz
Voltage:	230V AC / 50Hz	230V AC / 60Hz	120V AC / 60Hz	100V AC / 50Hz
Power:	2200 W	2600 W	1350 W	1250 W
Fuse:	15 A	15 A	15 A	15 A
Weight:	20 kg	20 kg	20 kg	20 kg
Dimensions (WxDxH):	423x523x542 mm	423x523x542 mm	423x523x542 mm	423x523x542 mm
Safety test:	S / CE	UL	UL	S / C
Ambient temperature:	10 - 40 °C	10 - 40 °C	10 - 40 °C	10 - 40 °C
Distance back panel:	min. 20 mm	min. 20 mm	min. 20 mm	min. 20 mm
Noise emission: (steam service)	> 70dB (A)	> 70dB (A)	> 70dB (A)	> 70dB (A)



Spare parts/service

For maintenance / repair / spare parts /...

Your competent service partner (company stamp)

HOTLINE

Manufacturer

Franke Kaffeemaschinen AG
Dorfbachstrasse 2
CH-4663 Aarburg
Switzerland

Phone +41-62-787 31 31
Fax +41-62-787 30 10
web www.franke.cs.com
e-mail kmch@franke.com

Custom adjustments...

Your customer menu

- The Adjust Code function must be pre-programmed by a service technician
- Access protection using a programmable PIN code is available -> see menu item 9

A

XXXX

Set PIN Code

- Code Adjust A
- Code Adjust B
- Code Adjust C



enter

Enter code!


Save using **PROG.** and continue with the next step



B



Customer menu

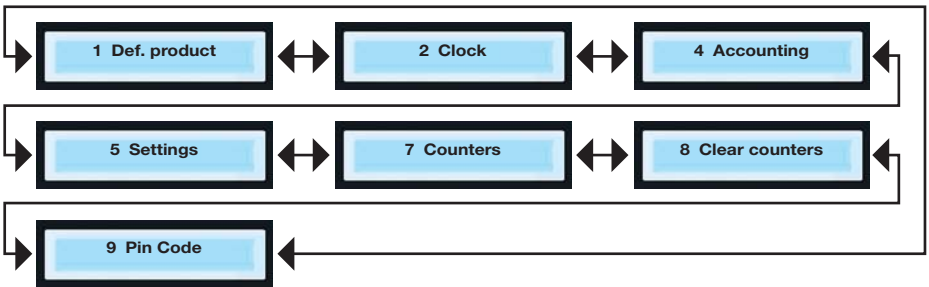

HINT



The menus below change depending on product!

1) Entry point: press for 3 seconds

2) Make choice

Menu or parameter




PROG. = ENTER BUTTON

- Confirm choice
- Parameter settings store

3) Confirm choice

4) Parameter adjustment

5) Confirm settings

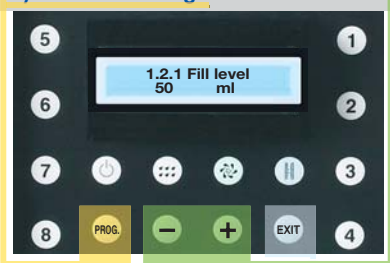

EXIT = Back button

- Leave menu with EXISTING settings
- Leave menu

C



Your settings

 
...customize your Flair

Please pay attention to the indications in the display as they complete this instruction according to the latest version of the operating software of your machine.

Depending on the machine configuration some submenu's may not appear!

1 Def. product

1.1 Selection



Choose button for
 Coffee / milk products
 Water / steam

1.2.1 Fill level



Test run:
using corresponding
product button

adjust

1.2.2 Foam amount



Test run:
using corresponding
product button

adjust

1.2.3 Milk amount



Test run:
using corresponding
product button

adjust

1.2.4 Steam



Test run:
using corresponding
product button

adjust

1.3.1 Coffee qty



Test run:
using corresponding
product button

adjust

1.3.2 Ch. grinder

Grinder left
 Grinder right
 both grinders

1.4 Pre-Inject

off
 short
 long

1.5 Temperature

low
 standard
 high

1.6 Textedit

Letter / number
 adjust
 PROG = 1 position further

1.7 Text name

ON
 OFF
 adjust

2 Clock

2.1 Date/time

Day
 Date
 Hour [h]
 Minute [min]

PROG = 1 position further

2.2 Timer funct.

ON - [h]
 - [min]
 OFF - [h]
 - [min]
 Weekday*

*Active days in CAPITALS!

PROG = 1 position further

4 Accounting

4 Accounting

Switched on
 Switched off
 adjust

5 Settings

5.1 Language


Choose language
 for display
 adjust

5.2 Water hard.

adjust

Water hardness:

	German	French
LEVEL --	--	--
LEVEL 1	1 - 7°	1,79 - 12,53°
LEVEL 2	8 - 15°	14,32 - 26,85°
LEVEL 3	16 - 23°	28,64 - 41,14°
LEVEL 4	24 - 30°	42,96 - 53,7°

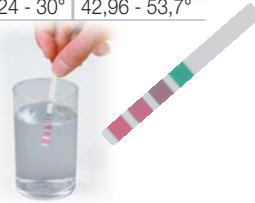

5.3 Reset filter

Reset filter?
 clear

7 Counters

7.1 Machine

Rem. quant. filter
 Degree of calcification
 indicate

7.2 Prod. total

Prod. coffee tot.
 Prod. milk tota!
 Prod. water tot.

7.3 Prod. single

Press product key

8 Clear counters

8 Reset

Single product
 clear

9 Pin Code

9.1 Adjust A

A code is required
 for switching on!
 enter

PROG = 1 position further

Enter and confirm the new PIN code A
 WITHOUT Code: Code 0000

9.2 Adjust B

A code is required
 for switching on!
 enter

PROG = 1 position further

Enter and confirm the new PIN code B
 WITHOUT Code: Code 0000

9.3 Adjust C

A code is required
 for switching on!
 enter

PROG = 1 position further

Enter and confirm the new PIN code C
 WITHOUT Code: Code 0000


Message on Display	Cause	Measures
Fill water tank	The tank is empty The water level indicator has jammed The tank is incrustated with lime scale, the water level indicator is adhering to the tank	Refill water Empty tank, rinse out, fill and replace Remove tank, descale, rinse thoroughly, fill and replace
Empty grounds container	The grounds container is full The indication does not go away The indication appears after only a few cups	Empty grounds container Remove tray for about 10 sec. and replace Leave the unit switched on while emptying the dregs container
Fill left / right coffee beans	The bean hopper is empty The indication does not go away	Refill beans Draw a cup of coffee, the indication goes away only after a delivery
Empty drip tray	The residual drip tray is full The indication does not go away	Carefully remove tray, empty, rinse out and replace Remove tray, clean metal contacts [see page 5 «Descaling» Step 8]
Cleaning necessary	220 deliveries or 180 rinses have been performed The indication does not go away	Cleaning [pages 4 - 6] Carry out cleaning again, but this time do not add a cleaning tablet
Descaling necessary	The unit must be descaled The indication does not go away	Carry out descaling [pages 4 - 6] Carry out descaling again, but this time only with water and without descaler
Check bean hoppers	A stone has become lodged	Remove stone [see below]
Coffee outlet missing	Outlet not properly clicked in place	Correctly fit outlet
Grounds container missing	Grounds container lid missing	Place lid on grounds container
Drip tray missing	The drip tray is not snapped in correctly	Insert drip tray correctly
Malfunction	Various causes	Contact customer service

HINTS



- Switch machine ON/OFF: if error message still appears -> consult list
- Insufficient foam when foaming milk -> Cappuccino cleaning, bypass cap clean or replace
- Coffee flow is stopped after prebrew -> Deliver a cup of coffee [Insufficient powder in system]
- During coffee delivery, the coffee flows only drop by drop -> Set grinder to coarser level [see below]
- Very loud noise from the grinder -> Stones in the grinder remove [see below]
- «Descaling», Step 3: If the descaling process hangs here -> remove and replace the water tank

Removing stones

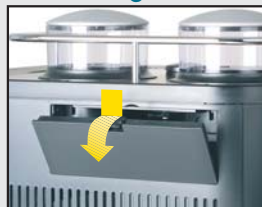

1. Remove flap

Set machine out of order



2. Press the slide backwards



3. Remove the bean hopper



4. Turn until the jammed stone has been released

Adjust the fineness of the grind



While the grinder is running

This TSM SUCCESS MANUAL® has been examined by Electrosuisse for conformity with the safety relevant standards, and has been analysed by an application-oriented risk analysis for the completeness and correctness of the indications for a safe use of the appliance. Thereby we assume a use with which can be reckoned based on common sense.

TSM® TSM SUCCESS MANUAL®
Safe to use - easy to understand due to
TSM® - Total Security Management and
ergonomic communication®

electrosuisse

0404_4